 


# INSTRUCTION


## Evoke 2400B

## ● How to update the firmware of Evoke 2400B:


1. Download the firmware installation package from the website.
2. Put the three firmware files of fixture into the root directory of the USB drive (make sure the versions of the three firmware files are matched).
3. Insert the USB flash drive into the USB port of the fixture.
4. Enter to the menu and rotate the "right knob" to FIRMWARE UPDATE.

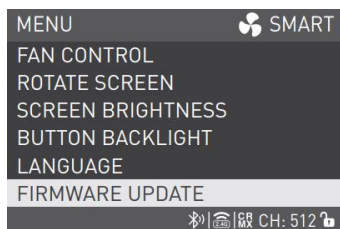

5. Press the "right knob" to the interface for searching the firmware file.

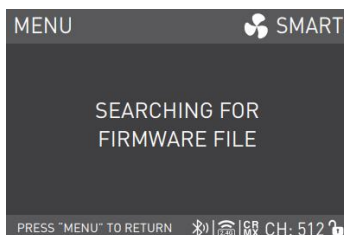

6. After the firmware file have been found, rotate the "right knob" to select UPDATE to update the firmware.

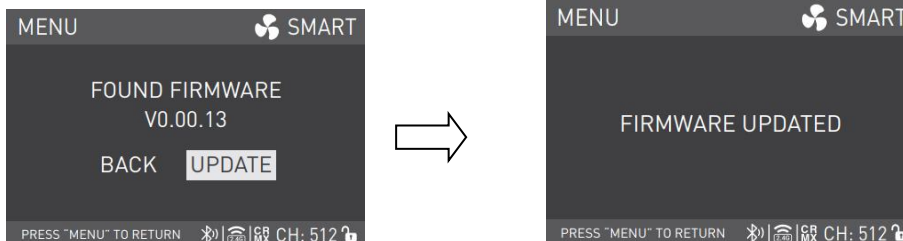

7. The fixture will restart automatically and work normally after the update is completed.

## ● Precautions:

1. Please do not rename the firmware file.
2. Ensure the USB flash drive is formatted to FAT, FAT32 or exFAT.
3. If it prompts "THE VERSIONS OF THE THREE FIRMWARE FILES DON'T MATCH, PLEASE CHECK THE FILES AND TRY AGAIN", please check whether the versions of the three firmware files are matched.
4. If it prompts "MISSING PARTS OF FIRMWARE FILES, PLEASE CHECK THE FILES AND TRY AGAIN", please check whether there are three firmware files in the USB drive.
5. If it prompts "NO FIRMWARE FOUND", please check whether the firmware files are correct, whether the firmware files are stored in the root directory of the USB flash drive, or whether the USB flash drive format is FAT, FAT32 or exFAT.
6. If all the above steps are done and the firmware files still cannot be found, try to re-format the USB flash drive and update again.
7. If the fixture still cannot identify the USB flash drive, please replace the USB flash drive.