

INSTRUCTION

Forza 60C

● How to update the firmware of Forza 60C:

1. Download the firmware installation package from the website.
2. The update file "Forza60C_Fw_Vx.xx.xx.upd" must be stored in the root directory of the USB flash drive.
3. Turn off the Forza 60C. Insert the USB flash drive into the USB port of the fixture and then turn on the fixture. Press the MODE button, and the screen will show "SEARCHING FOR FIRMWARE FILE", when the screen shows "Found firware _Vx.xx.xx" then rotate the Right knob to select "UPDATE" and press the Right knob to confirm. Now the screen will show "FIRMWARE UPDATING". After the screen shows "FIRMWARE UPDATED", the fixture will restart automatically and then return to the operation interface.

● Precautions:

1. Ensure the USB flash drive is formatted to FAT, FAT32 or exFAT.
2. Please do not rename the updated file.
3. Please ensure the updated file is stored in the root directory of the drive.

● Troubleshooting:

1. If the lighting fixture cannot identify the USB flash drive, please try the following:
 - (1) Check if the name of the firmware is correct.
 - (2) Ensure the format of the USB flash drive is FAT, FAT32 or exFAT. If the format is not FAT, FAT32 or exFAT, please re-format the USB flash drive to FAT/FAT32/exFAT and follow the step 2 and 3 of the update instructions above to update again.
 - (3) If the format of the USB flash drive is FAT, FAT32 or exFAT.
 - ① Please ensure upgrade package file is stored in the root directory of the USB flash drive.
 - ② Please try to re-format the USB flash drive and follow the step 2 and 3 of the update instructions above to update again.
 - (4) If the USB flash drive still cannot be identified after following all the steps mentioned above, please try another model or brand of USB flash drive and try again.
2. The lighting fixture can identify the USB flash drive, but the interface of the screen stops at displaying "updating" for over 5 mins and cannot return to the operation interface:
 - (1) Please restart the lighting fixture and follow the upgrade instructions again to enter the updating state.
If the problem still cannot be solved by rebooting the fixture, please try the next step below.
 - (2) Please try to re-format the USB flash drive and follow steps 2 and 3 of the update instructions above to update again.
 - (3) If the USB flash drive still cannot be identified after following the two steps mentioned above, please replace the USB flash drive with another one.